


VOLA A62, A63, A63F
VOLA VR1795

Fitting instruction
 Montageanleitung
 Monteringsvejledning
 Monteringsvægledning
 Montage hanleiding
 Manuel de montage

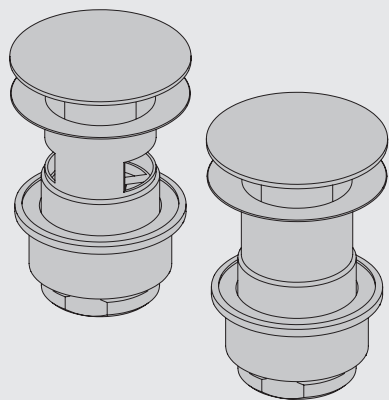


www.vola.com


A62 V2_40999693




A62

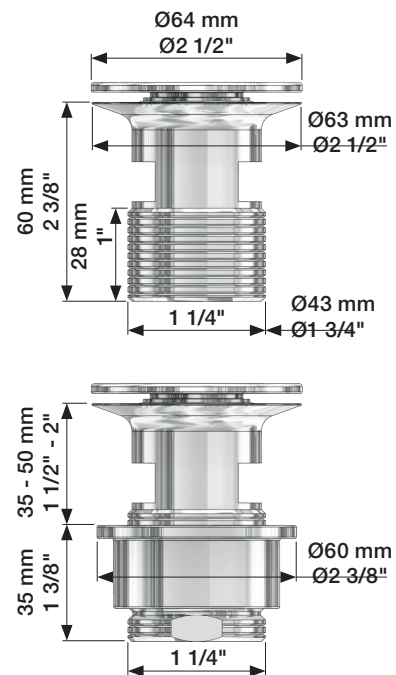

A63, A63F

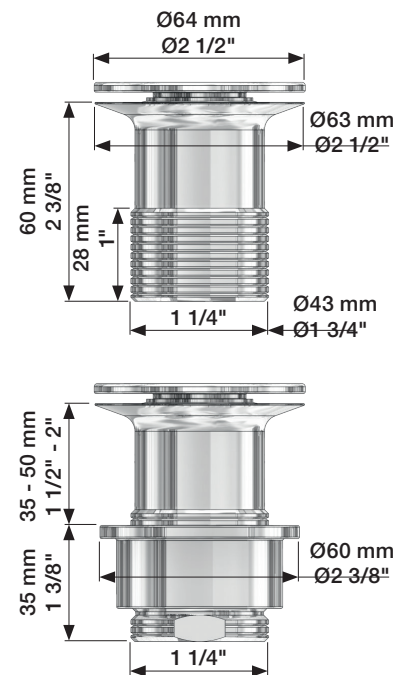


A63F

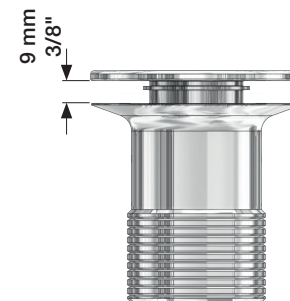


VR1795

VR1795 & A63:

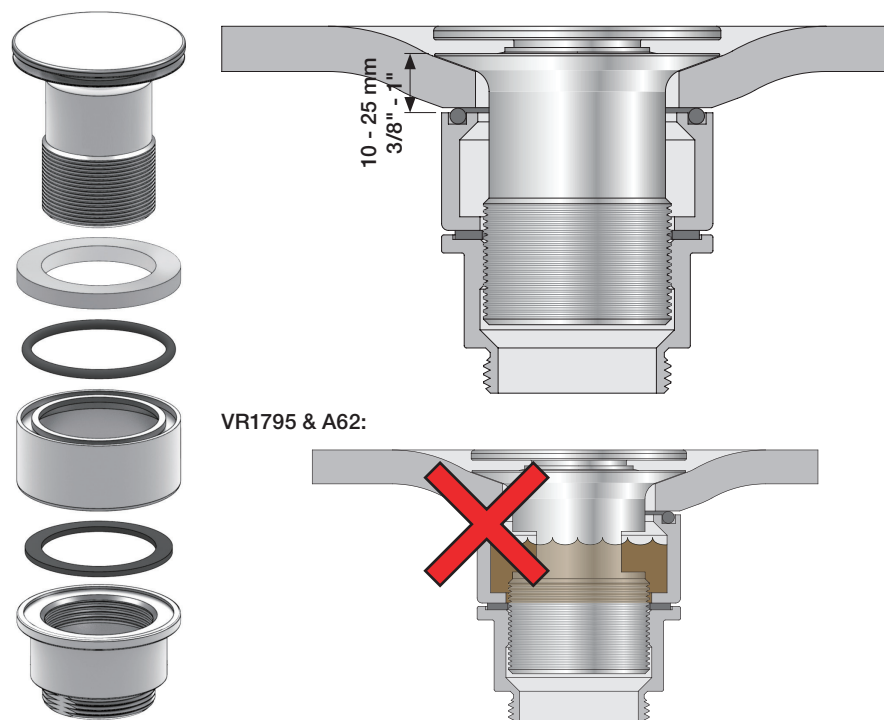


VR1795 & A62:

A62:

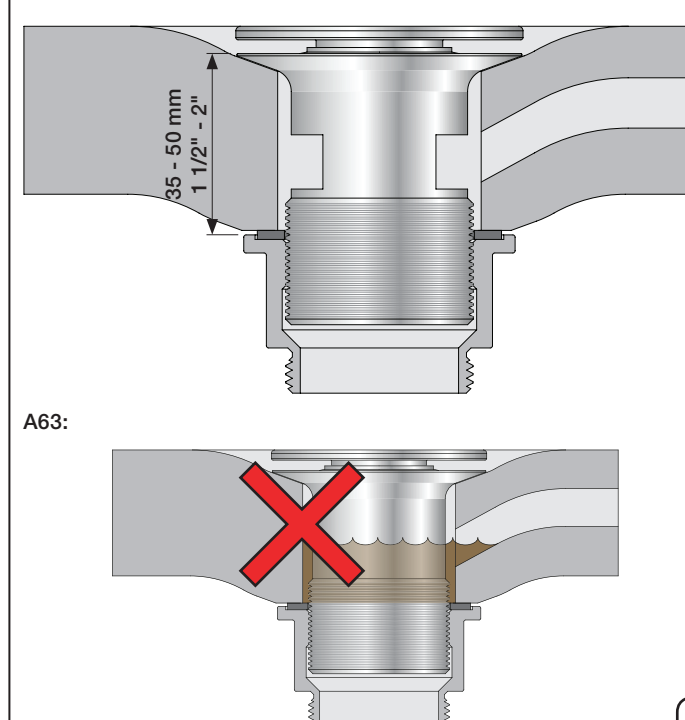

A63:

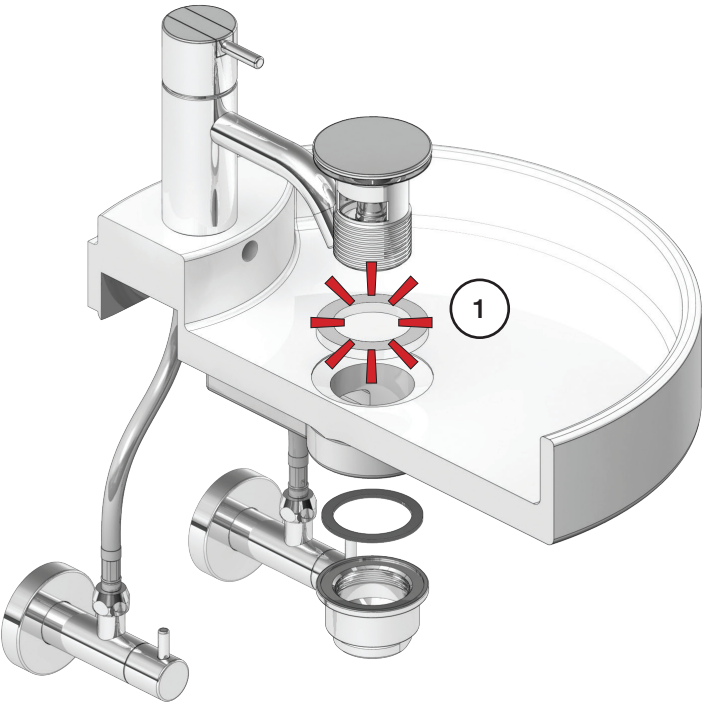

1

Plumbers putty
Installationskitt
Sanitetskit

Sanitetskit
loodgieters mastiek
Mastic sanitaire



2

Operating
Bedienung
Betjening
Not/Nicht/Ikke/Inte/Niet/Pas: A63F


Bruk
Bediening
Fonctionnement


PUSH




3

PUSH

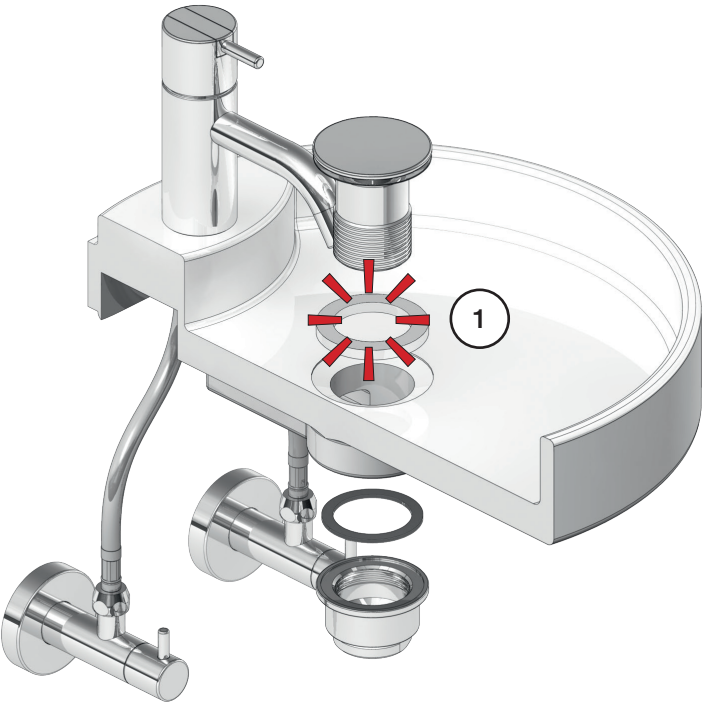

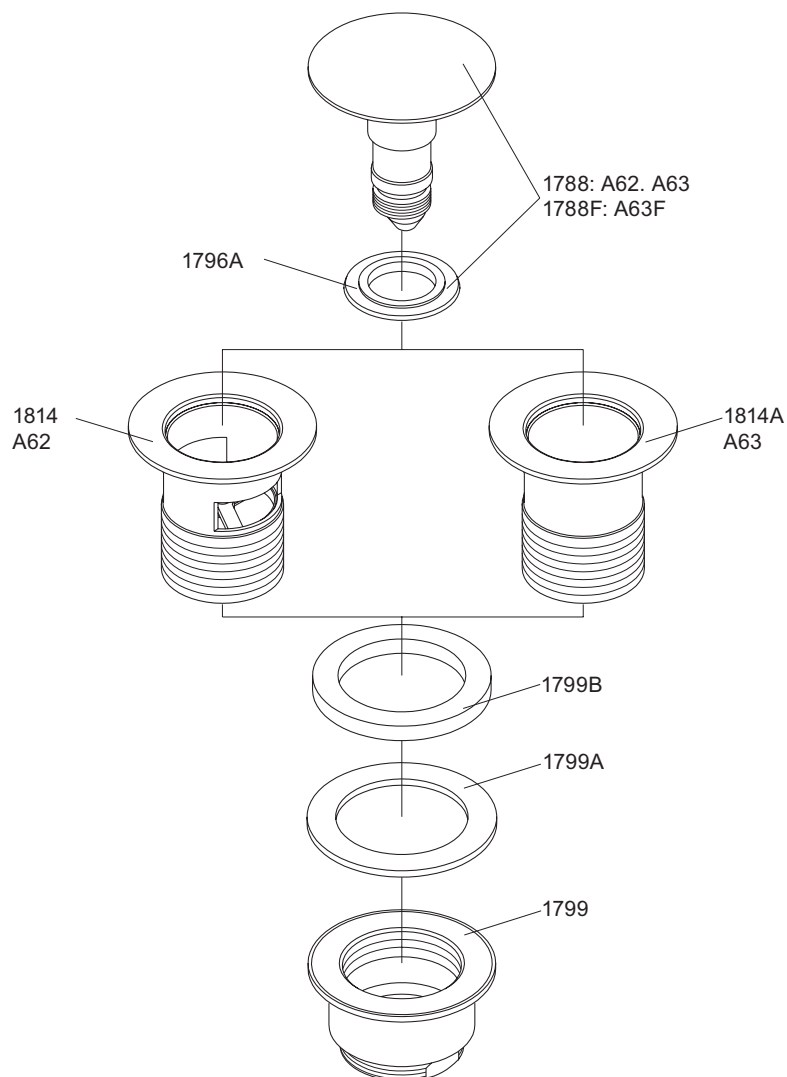


1795 + A63 ~~1795 + A62~~

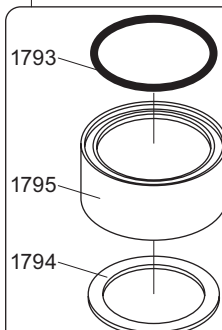

Distance collar.
Distanzring.
Afstandsring.
Avståndsring.
Afstandsring
Anneau de distance.

Not included in the delivery.
Nicht im Lieferumfang enthalten.
Indgår ikke i leverancen.
Ingår inte i leveransen.
Niet inbegrepen in de levering
Non inclus dans la livraison.

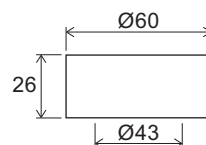

vola

Lunavej 2
DK-8700 Horsens
Tlf : + 45 7023 5500
sales@vola.com
www.vola.com

VOLA A62, A63, A63F

Date
Sep. 05

Rev.
3

Sheet
SB 96.1